
## ARC High current relay module #1440

Attach the mounting hardware and replaceable connectors as shown in **Figure 1** on the circuit board. By installing 12v wire at locations marked with A you will be able to use fuse holders supplied on the circuit board. In other words, A will be fused. If your circuit is fused at another location, you can use connector B. If you wish to use a number # 10 gauge wire it is best to split the strands in half and slide the strands equally under each side of connector screw see **Figure 2**.

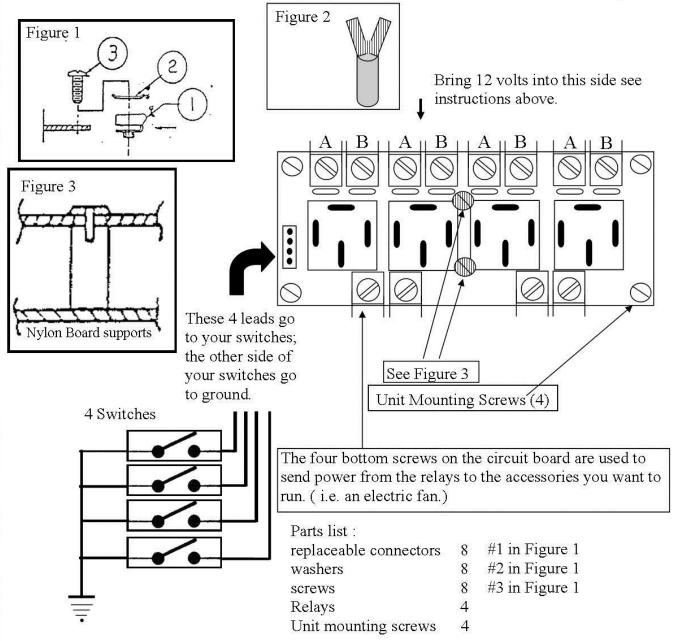

Strip wire back 3/8 of an inch and insert under washer and tighten screws.

